

HOW TO:

Install Skateboard Wheels and Skate Bearings



Step 1:

Remove axle nuts and speed washers.



Step 2:

Place bearing on the axle



Step 3:

Press the wheel over the bearing until you feel the bearing slide into the center of the wheel. If you hear a popping sound when you press the wheel onto the bearing it means the bearing is fully in. Repeat on the other side. Do this for all four wheels.



Step 4:

Place one speed washer on the axle of the skateboard truck.



Step 5:
Install the wheel onto the axle.



Step 6:
Place second washer on the axle.



Step 7:
With your skate tool or wrench, fasten the nut until there is no play—the wheel should be able to spin freely.

